

Lenovo Display Fleet Manager

User Guide

Version	1.0.3
Publish Date	2025-07-29

Content

Revision History	4
1. Lenovo Display Fleet Manager (LDFM)	5
2. LDFM deployment	5
3. Initial Login	5
3.1. Enter the username and password	5
3.2. Operation Process of Forced Password Change	6
3.3. Forget password	6
3.4. Password reset	6
4. Monitor list	6
4.1. Create, move groups	6
4.2. Display Columns	7
4.3. Settings	8
4.4. Export Settings Profile	8
4.5. Export	10
4.6. Update	10
4.6.1. Create Update Task	10
4.6.2. Update Task List	14
4.7. Delete Monitor	15
5. Update Package	15
6. Settings - Profile	16
6.1. Add Profiles	16
6.2. Delete Setting profile	17
7. User management	17
7.1. Add users	17

7.2. Reset user password	18
8. Operation record	19
9. Personal center	20
9.1. Change password	20

Revision History

Date	Modifications	Version
2025-03-10	Initial Creation	1.0.1
2025-07-02	Current Version Deployment Manual, Supports software versions 1.0.2.6 and later. • Updates: All images	1.0.2
2025-07-29	Current Version Deployment Manual, Supports software versions 1.0.2.8 and later. • Updates: All images, 3.1. Enter the username and password, 3.2. Operation Process of Forced Password Change • Newly added: 4.5. Export	1.0.3

1. Lenovo Display Fleet Manager (LDFM)

Lenovo Display Fleet Manager (abbreviated as LDFM) is a tool specifically developed for enterprise users to remotely manage monitors. It supports remote On-Screen Display (OSD) menu settings, firmware upgrades, and control operations for monitors.

2. LDFM deployment


For details, please refer to the "Lenovo Display Fleet Manager Installation Guide".

3. Initial Login

According to the configuration during the installation process, on the server, access `http(s)://localhost/` through a browser. (If you are on another host, enter: `https://server IP address or domain name/`).


3.1. Enter the username and password

1. Input username: admin.
2. Input initial password: When you click on the password input area with the mouse, a set of random passwords will be displayed at the top of the page. You can copy the password and paste it into the password field to complete the input.
3. Click the "Log In" button.

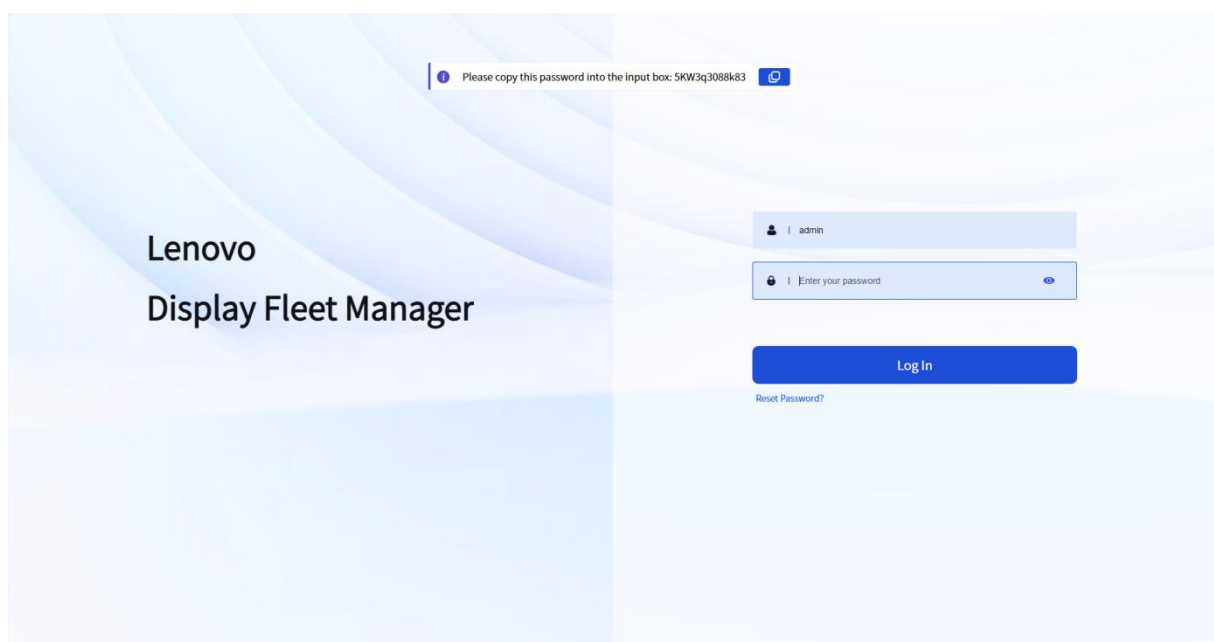

3.2. Operation Process of Forced Password Change

1. Input initial password.
2. Input new password.
3. Input Confirmation Password.
4. Click "Confirm" .

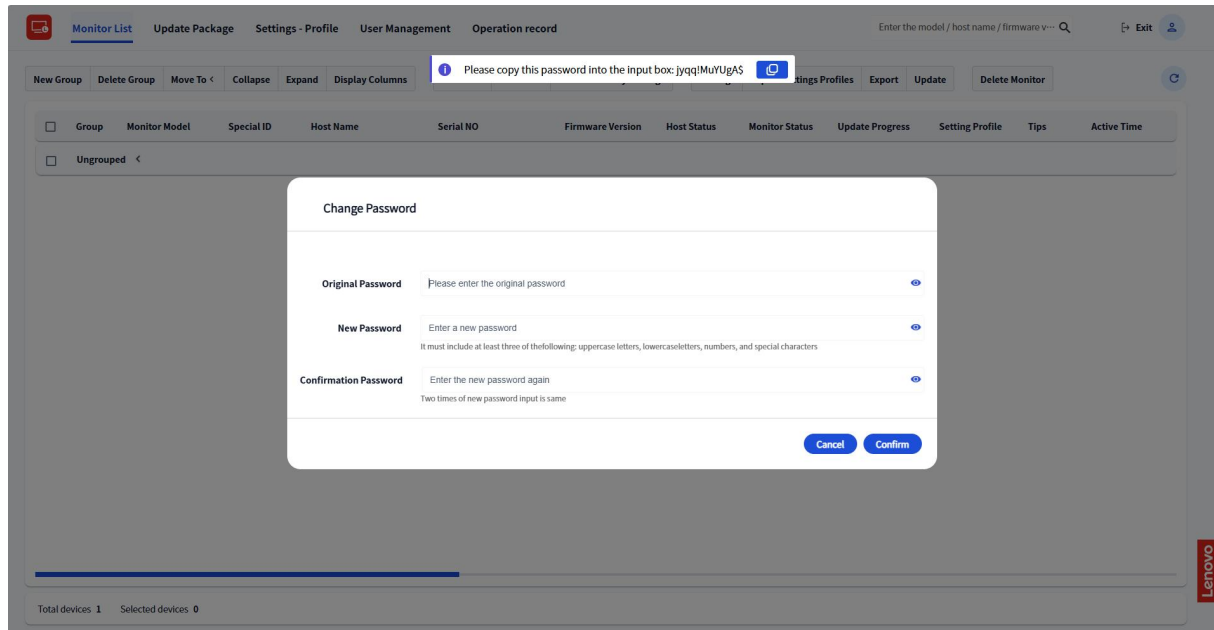

3.3. Forget password

Note: only applicable to non-initial login.


3.4. Password reset

1. Click on the "Reset Password" button in the login page.
2. Then contact administrator to get a random password after you get a prompt message.


4. Monitor list

4.1. Create, move groups

1. Click the "New Group" button to create a group, and then press the Enter key to save it.
2. Double-click the group name to modify it if necessary.

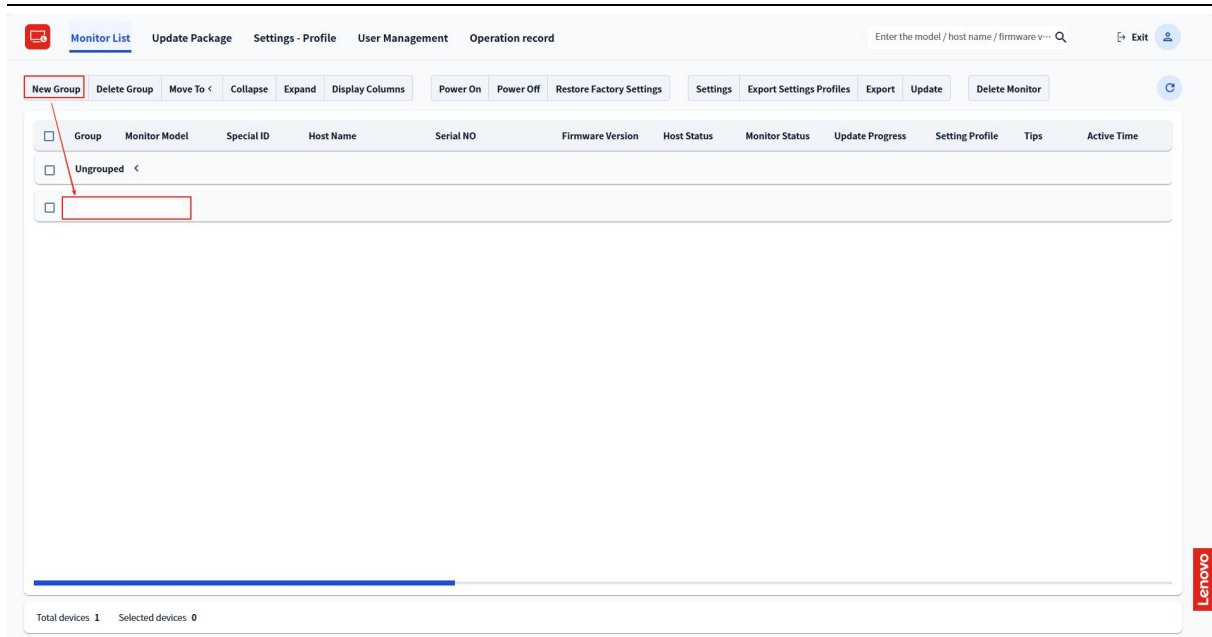


3. After creating a group, you can choose the monitors you want to move and then click the "Move to" button to select the target group.

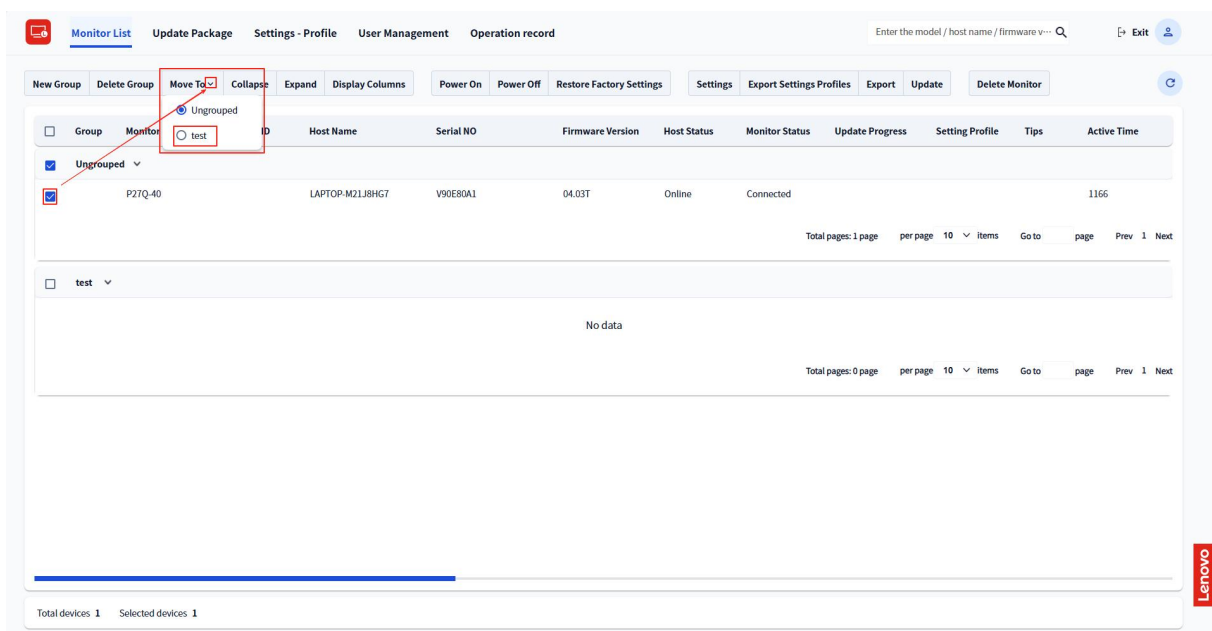


4.2. Display Columns

The "Monitor List" displays all On-Screen Display (OSD) setting columns by default. If you want to hide some of the display columns, please click on "Display Columns" and select the columns you wish to show.

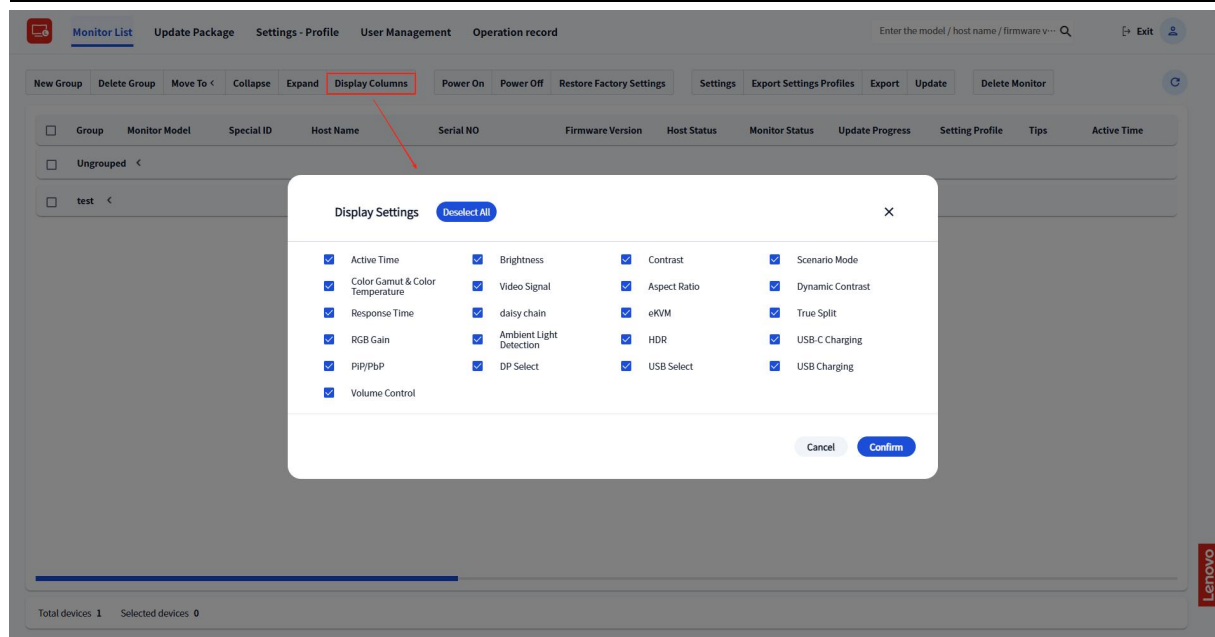


4.3. Settings

1. Select a monitor and then click the "Settings" button.
2. Select and set the options you wish to modify.
3. In the lower - left corner, you can also choose a Set Profile.

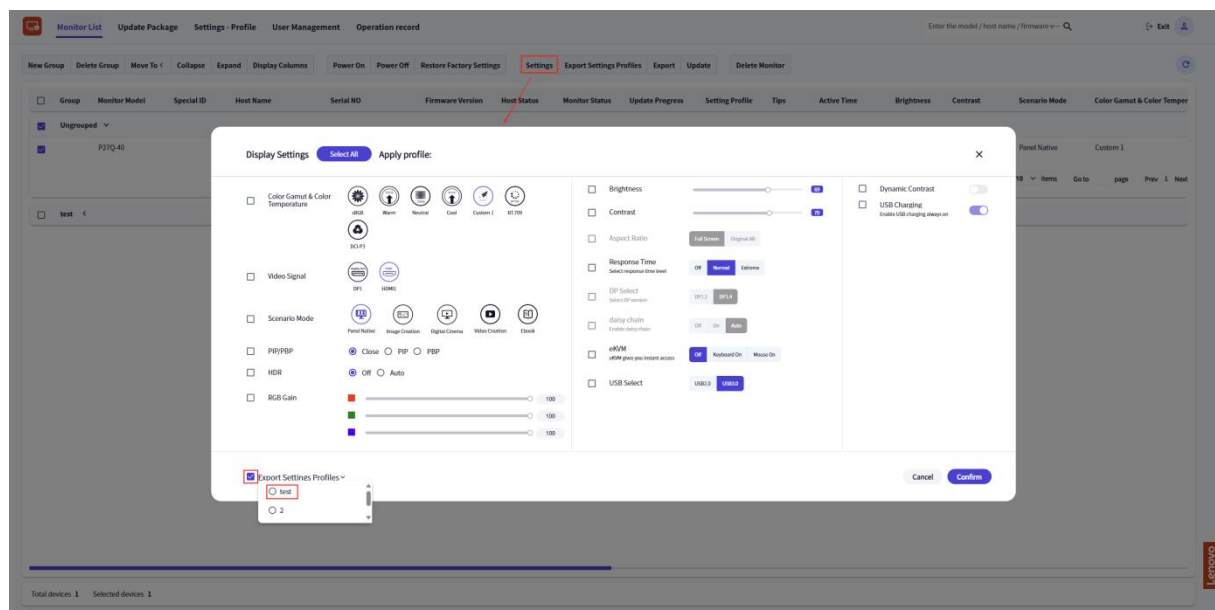


4.4. Export Settings Profile


1. Select a monitor and then click the "Export Settings Profile" button.
2. Input Filename.
3. Click the "Confirm" button.

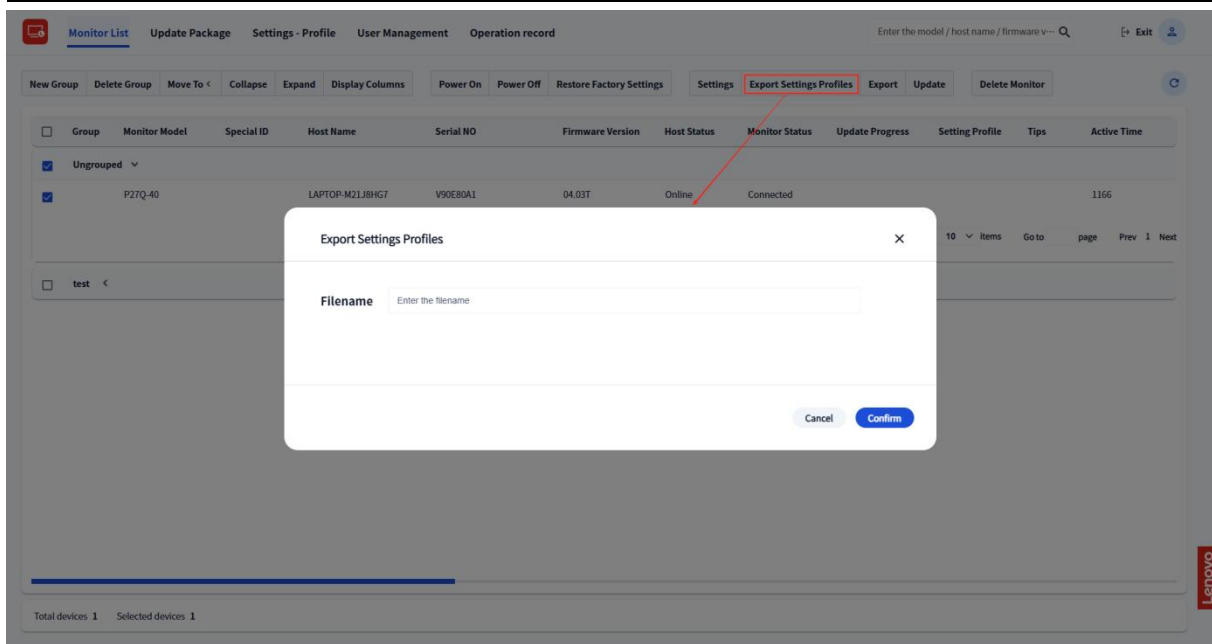

4. Then, a new profile will be stored in the "Settings - Profile" list.

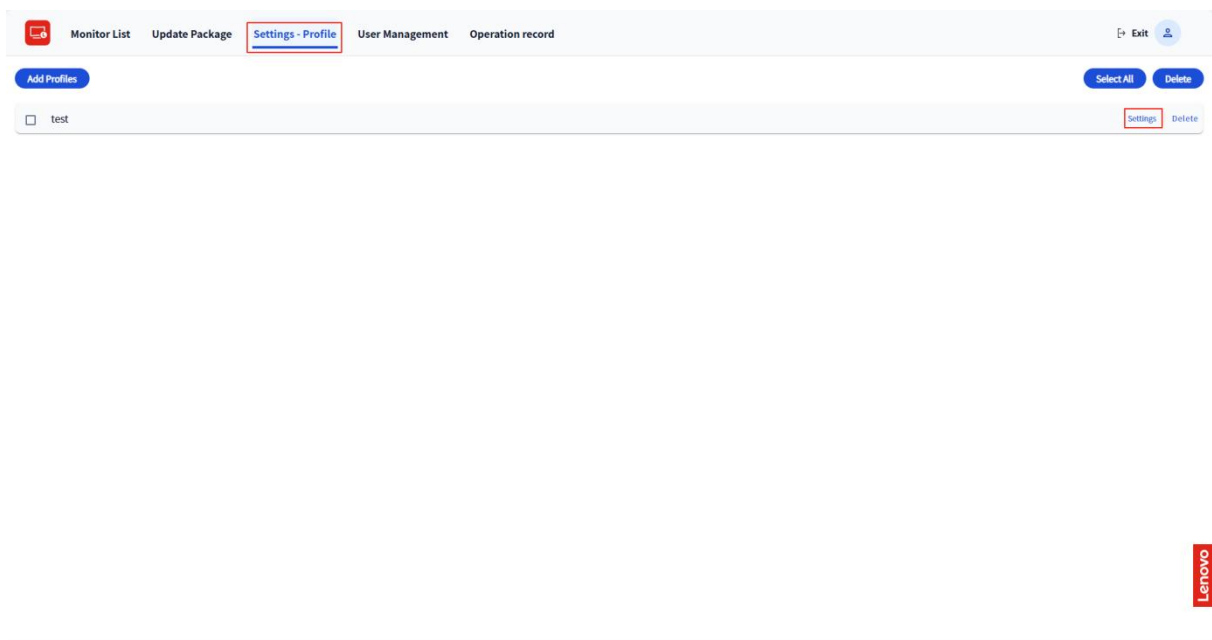

5. Click the "Settings" button, and you will see the details of the profile.

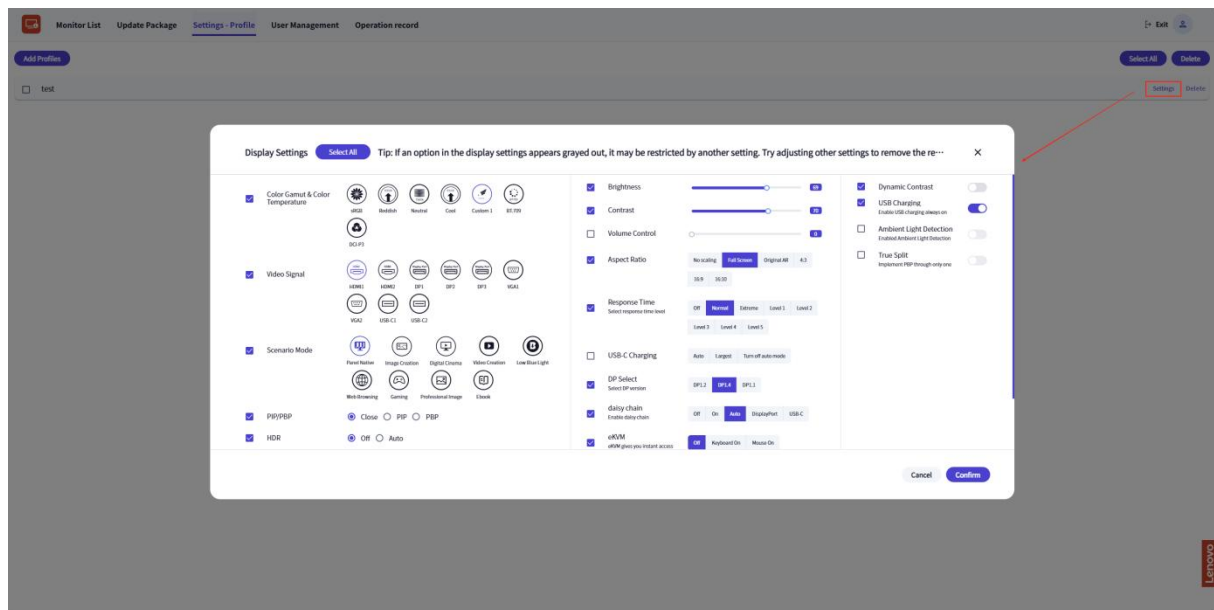


4.5. Export

Click the "Export" button, and the display list document will be downloaded to your local device.

4.6. Update


4.6.1. Create Update Task

1. Select a monitor and then click the "Update" button.

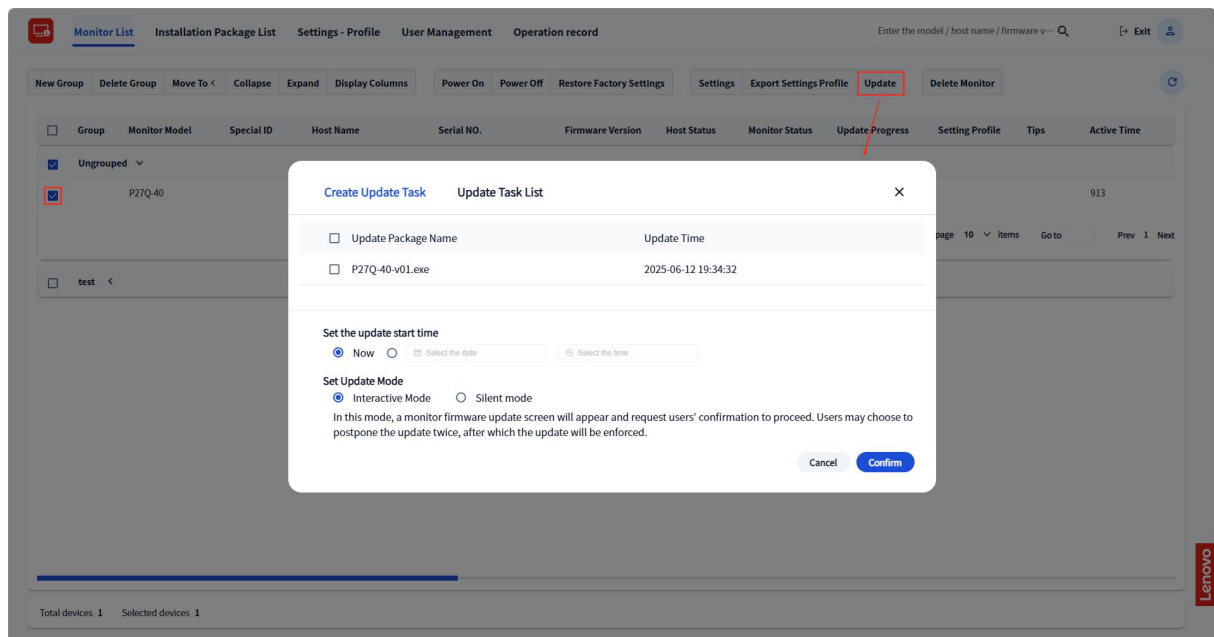


2. Select the latest update package. Upload the update package. Please refer to [5.Installation Package List](#).


3. Then, select the update start time (either "Now" or "a specified time").
4. Set the update mode (either "Interactive" or "Silent"). If you select silent mode, you can specify when the reboot takes effect.
5. Click "Confirm", and then the update task will start after it is successfully issued.

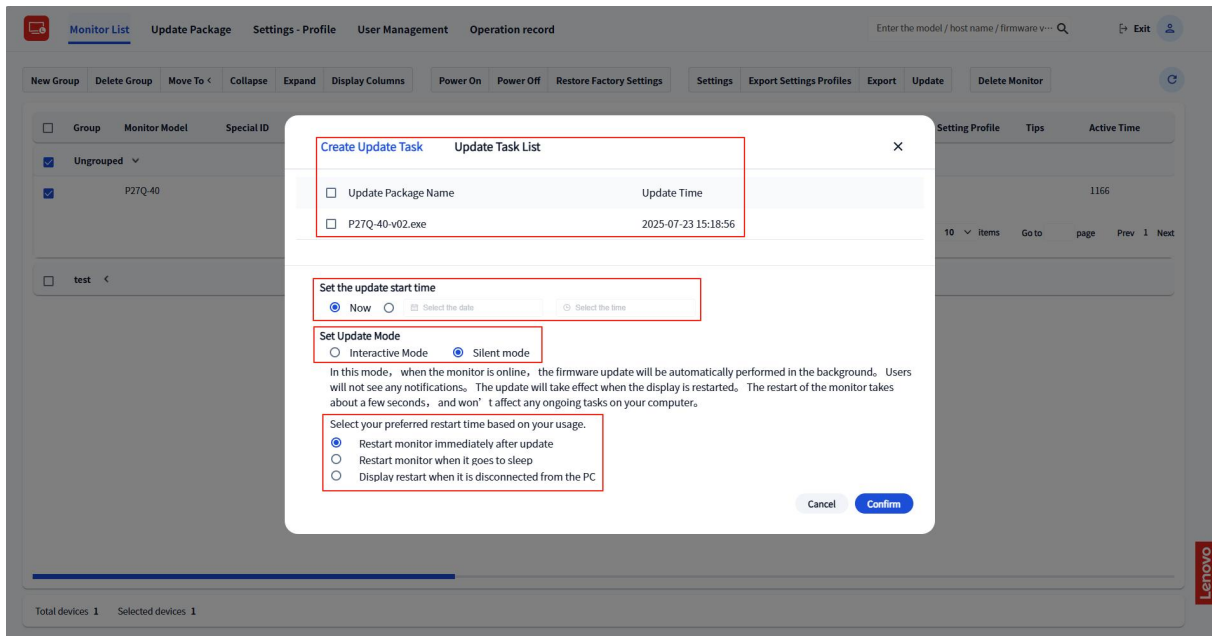

6. If administrator choose to send the upgrade package in interactive mode, the client will automatically pop up a window.
7. Client users can jump to a web page to view the documentation by clicking on the button "Lenovo Software License Agreement" and "Lenovo Privacy Statement".
8. Then check "I have read and agree to Lenovo Software License Agreement and Lenovo Privacy Statement".
9. Click "Next" can directly enter installation, then skip to step 12.

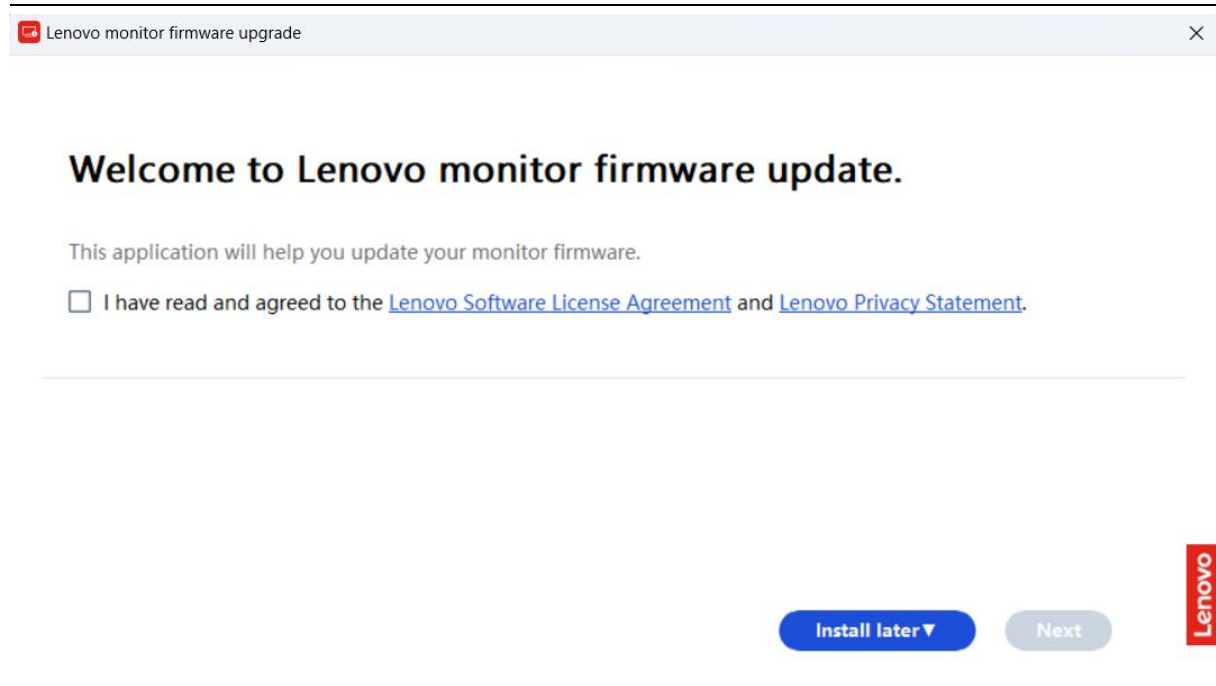


10. Click the "Install later", choose the time you want.

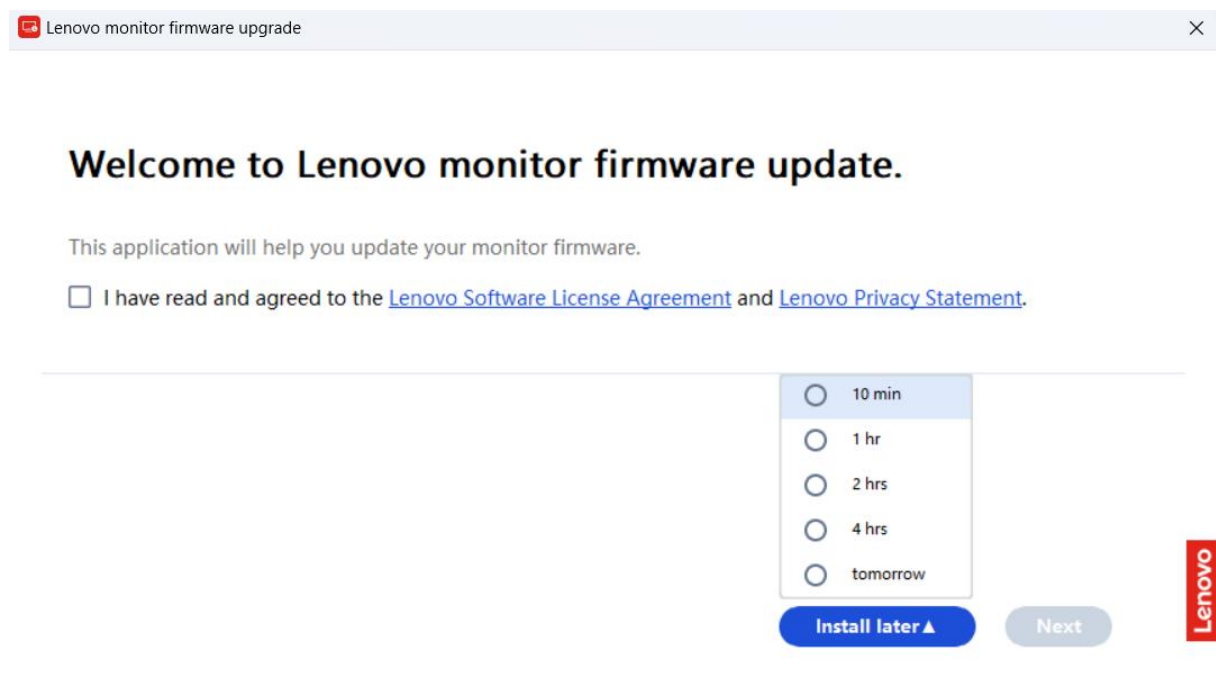


11. When the selected installation time arrives, the upgrade window will pop up automatically. Then, please click "Next" to proceed with the installation.


12. Confirm pre-installation checks, such as FW information. After passing these tests, you can click "Install" ; if not passed, contact administrator for help.

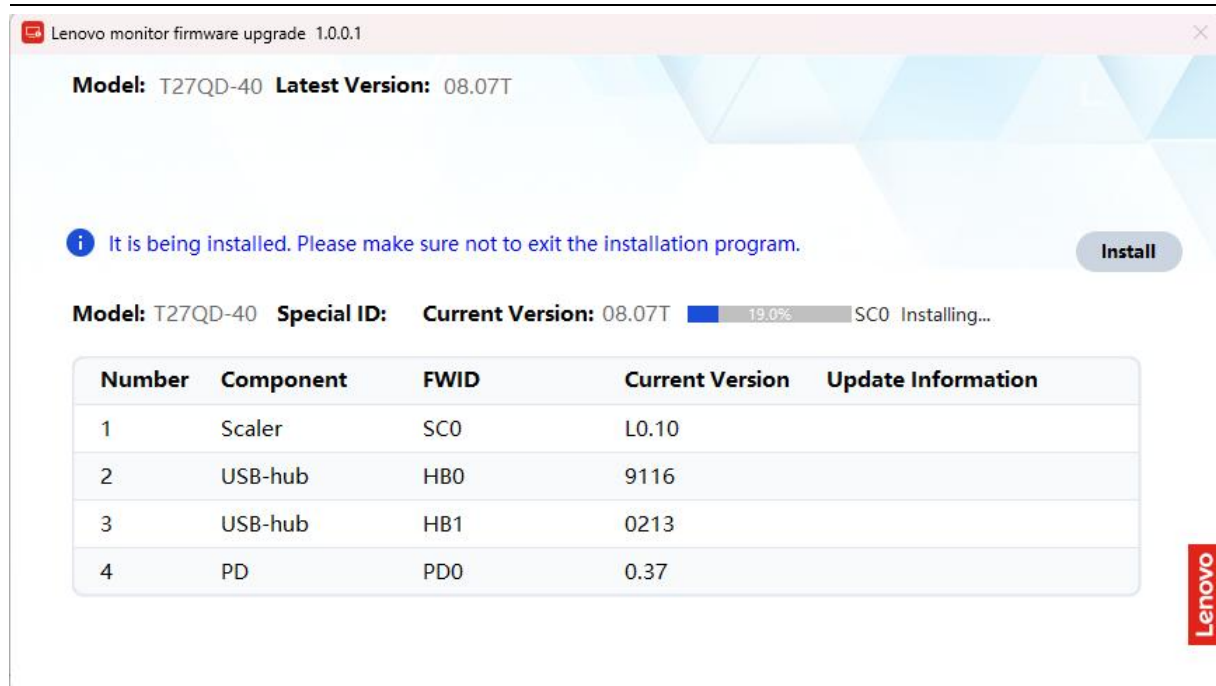

13. Wait for the installation progress, then close it. If you fail, contact administrator for help.

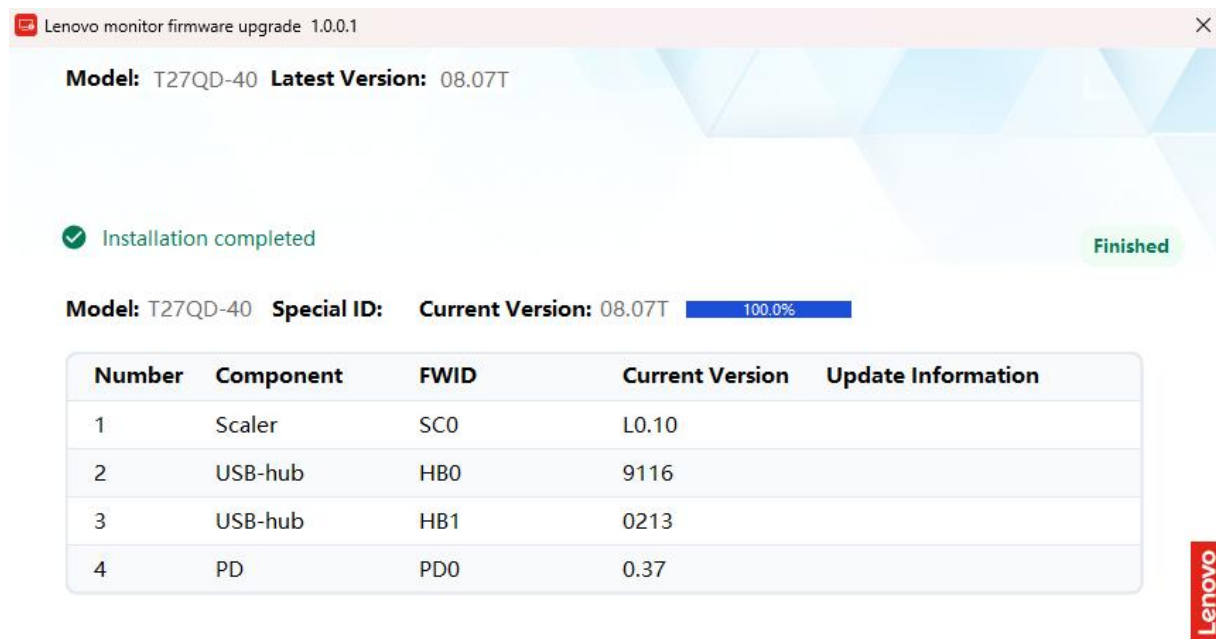


14. During the installation package runtime, the upgrade progress will be displayed on LDFM. If you have selected silent installation, the above upgrade package progress interface will not be shown.

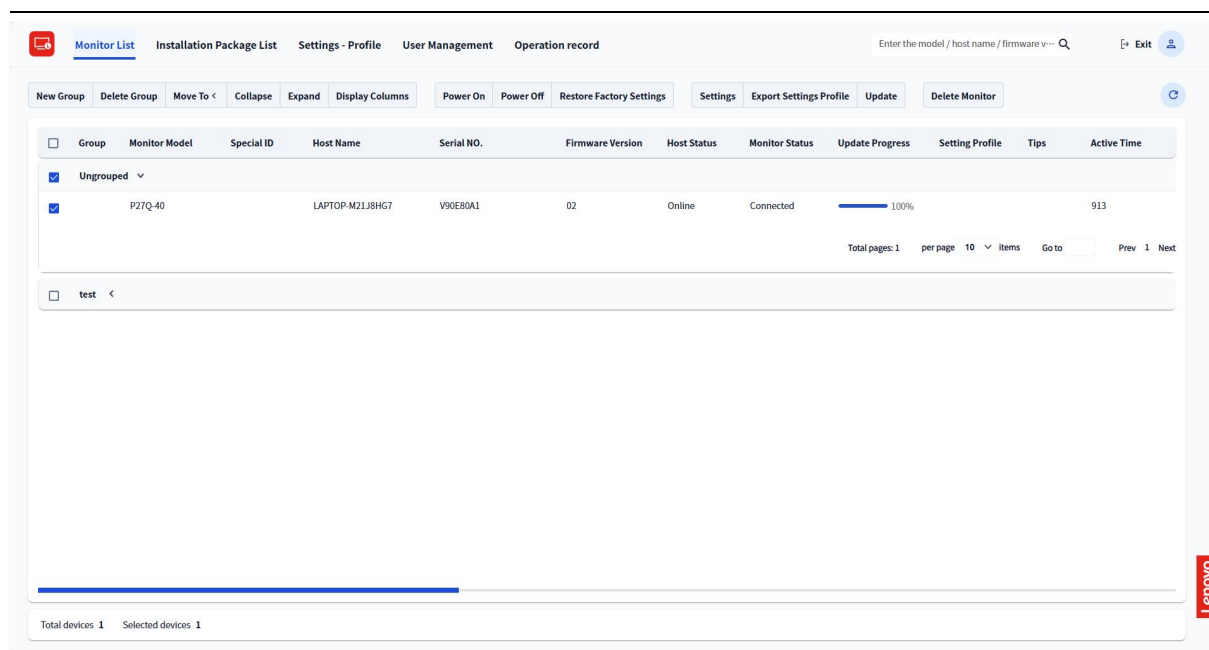


4.6.2. Update Task List

1. If you have selected to specify a time for an update task, you can view the generated task in the update task list.
2. Then, click the "View Details" button when you want to check the upgrade details.
3. Click the "Cancel" or "Cancel All" button when you want to cancel this specific update or cancel all update.

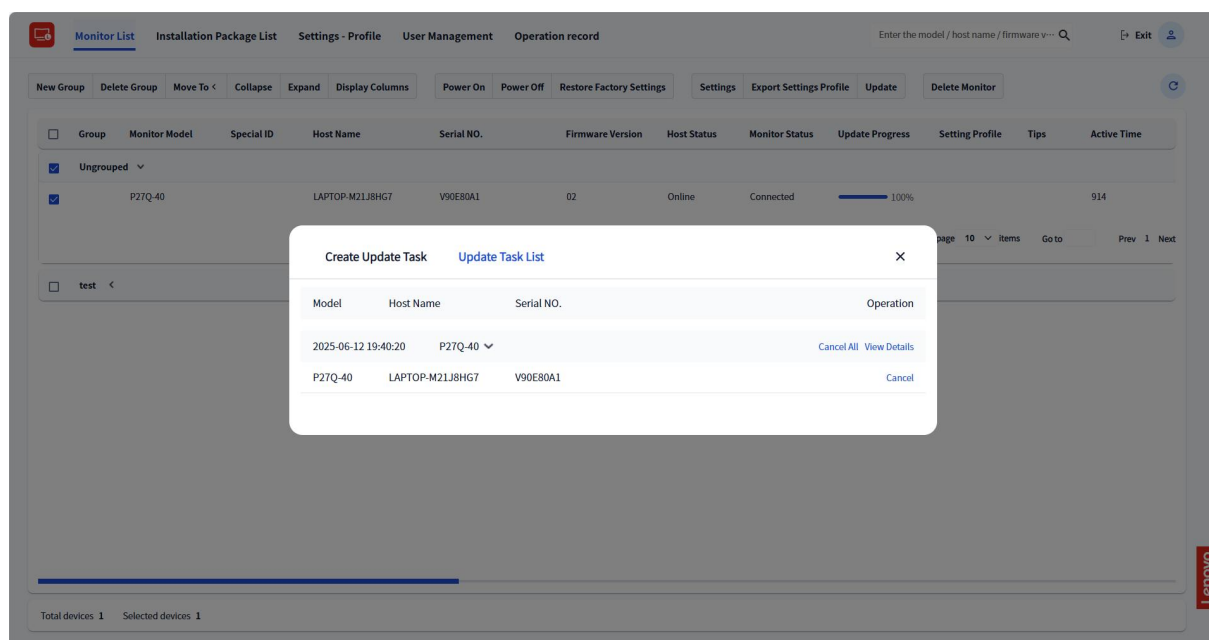


4.7. Delete Monitor

Select monitors, then click the "Delete Monitor" button to delete selected monitors.

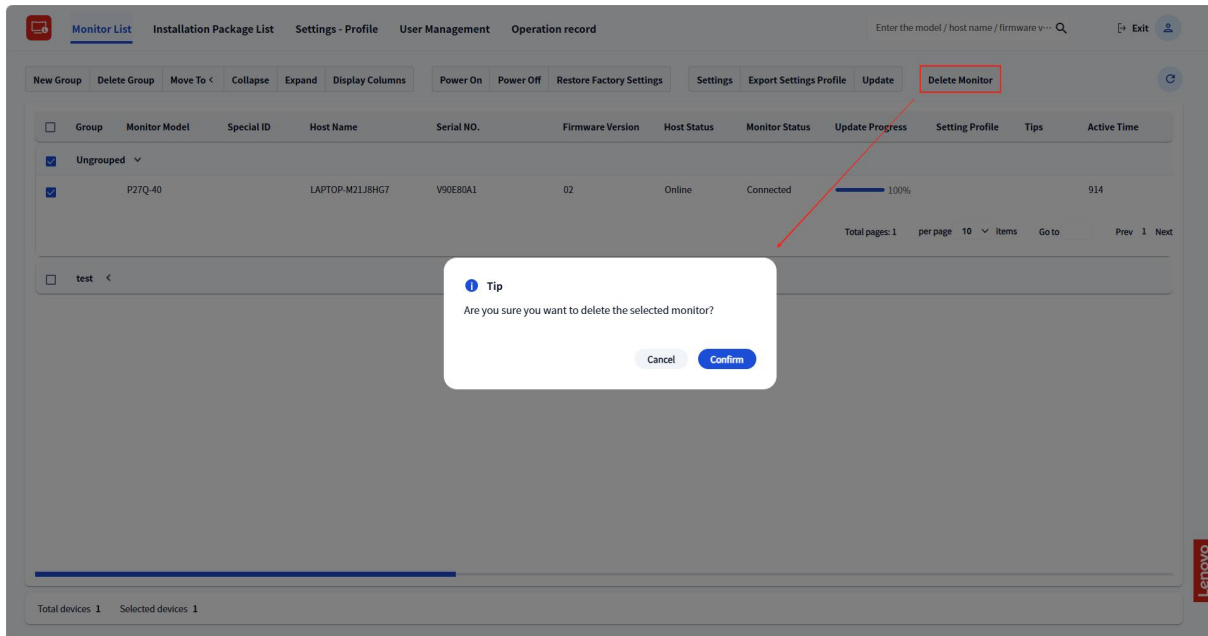

5. Update Package


1. Select a model and click the "Upload Update Package" button to upload an update package.
2. Select the Update package on your local computer and click "Open".

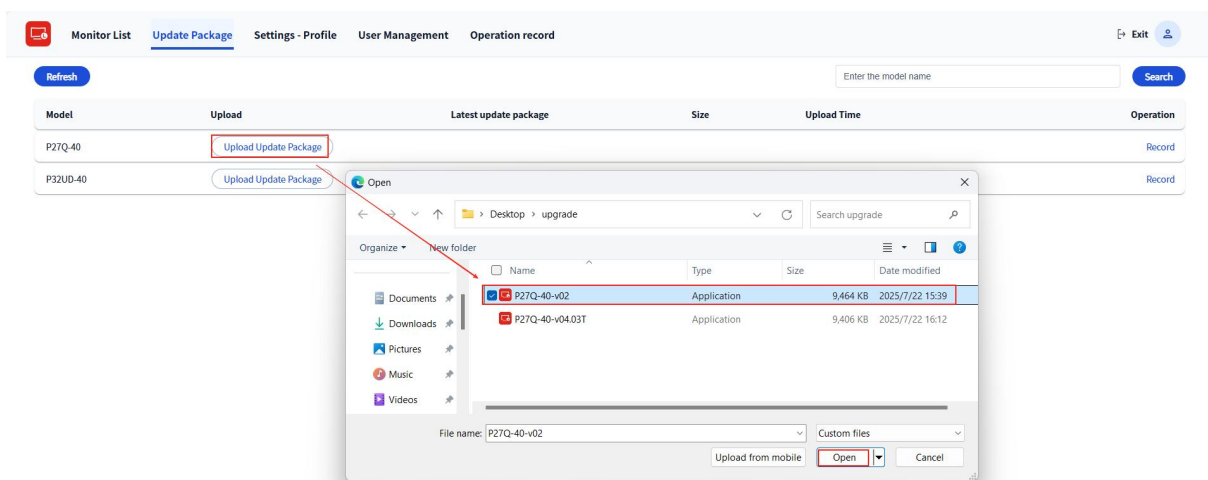

3. After a successful upload, the name, size, and upload time of the new

update package will be recorded.

4. Click the "Record" button to check if there is this update package.

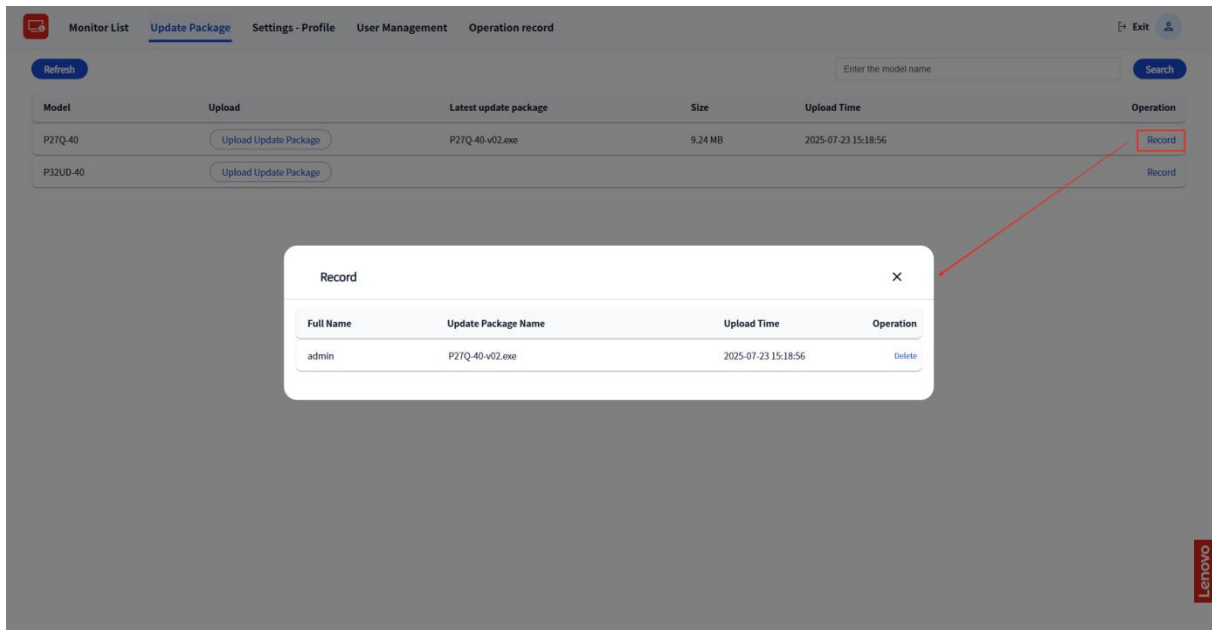


6. Settings - Profile


6.1. Add Profiles

1. Click "Settings - Profile".

2. Click "Add Profiles", and then enter the setting name.

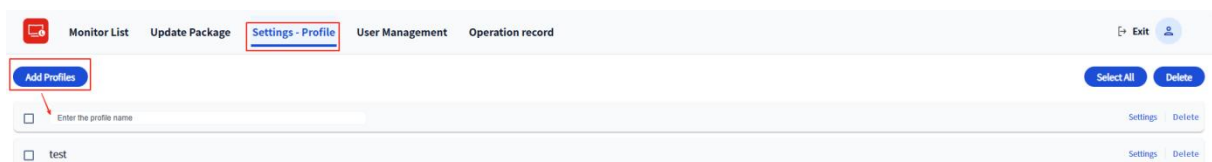

3. Click the "Settings" button, then configure the options you want and click "Confirm".

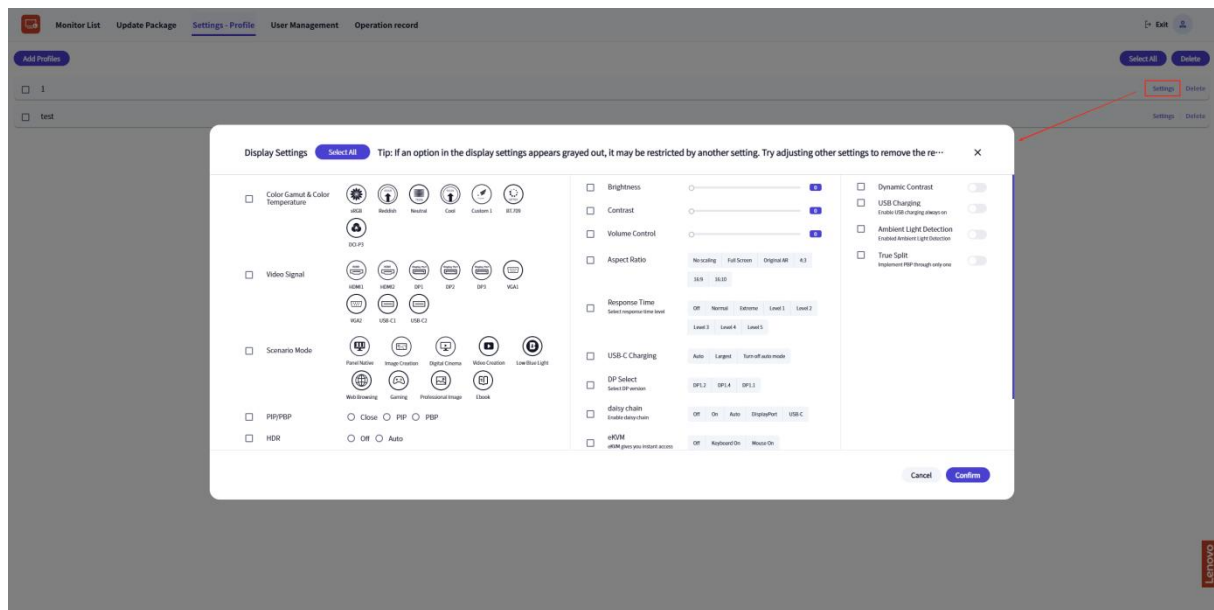

6.2. Delete Setting profile

Select a setting profile or click "Select All", and then click the "Delete" button.




7. User management

The functions of this part can only be used by users whose role is "Admin".


7.1. Add users

1. Click the "User Management" button, and then click the "Add" button.
2. Add a new line and fill in corresponding information and click the "Save"

button.

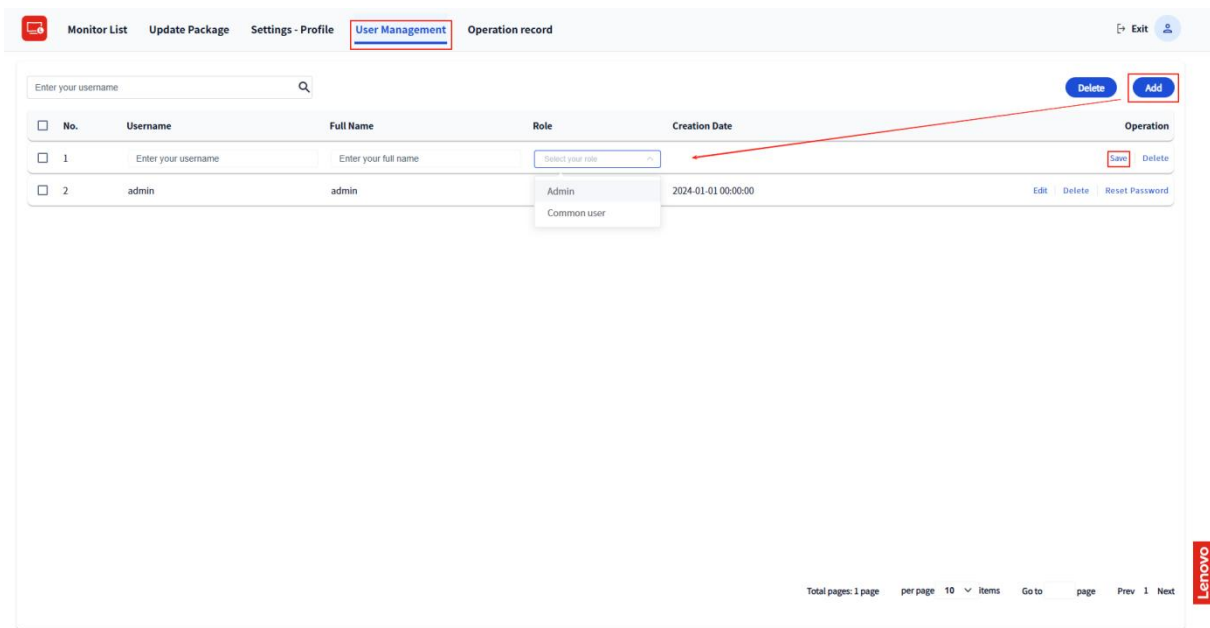

3. Copy the random password at the top and give it to the user you have created.

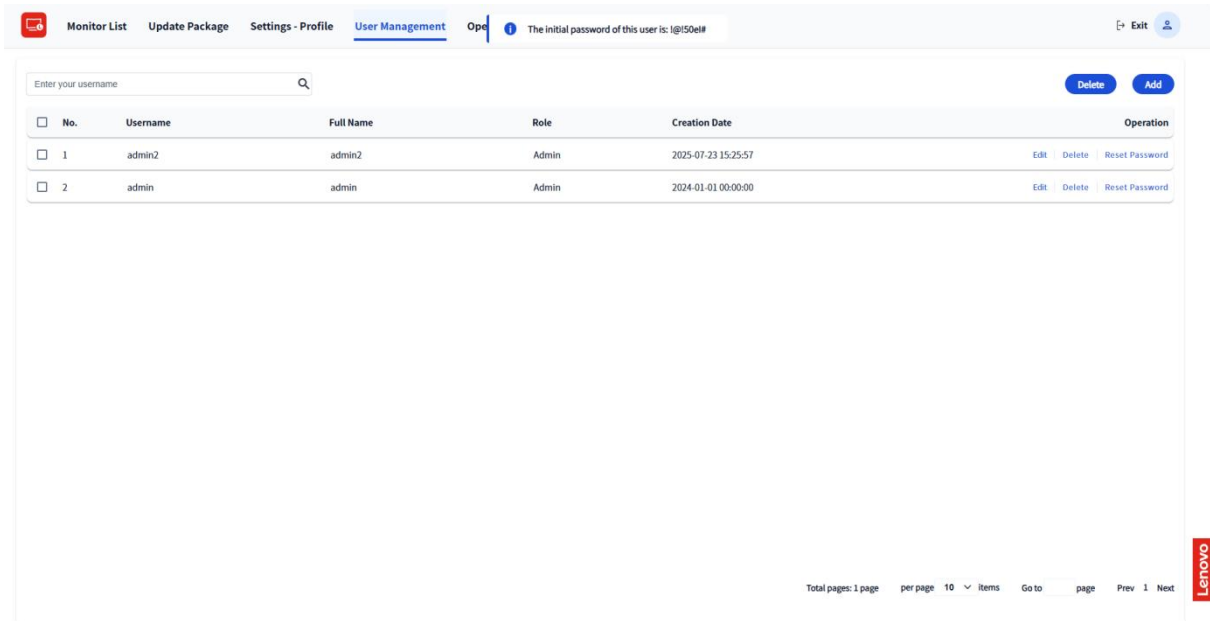

7.2. Reset user password

1. Select the user you want to reset.
2. Click "Reset Password" in the operation area, then get a random password.
3. Copy and send the password to user.

Monitor List Update Package Settings - Profile User Management Ops

The password has been reset to: \$!\$J.Hb@

Enter your username

Reset Password Add

No.	Username	Full Name	Role	Creation Date	Operation
1	admin2	admin2	Admin	2025-07-23 15:25:57	Edit Delete Reset Password
2	admin	admin	Admin	2024-01-01 00:00:00	Edit Delete Reset Password

Total pages: 1 page per page: 10 Items Go to: page Prev 1 Next

8. Operation record

The functions of this part can only be used by users whose role is "Admin".

1. Click the "Operation record" option.
2. You can click the "OSD" or "Installation Package" option to view the corresponding operation records.

Monitor List Update Package Settings - Profile User Management Operation record

OSD Update Package


Enter the model name

Delete


No.	Model	Serial NO	Operator	Full Name	Operation Date	Operation
1	P27Q-40	V90E80A1	admin	admin	2025-07-24 19:55:53	View Details Delete
2	P27Q-40	V90E80A1	admin	admin	2025-07-24 19:55:48	View Details Delete

Total pages: 1 page per page: 10 Items Go to: page Prev 1 Next

3. Click "View details" to see specific records.

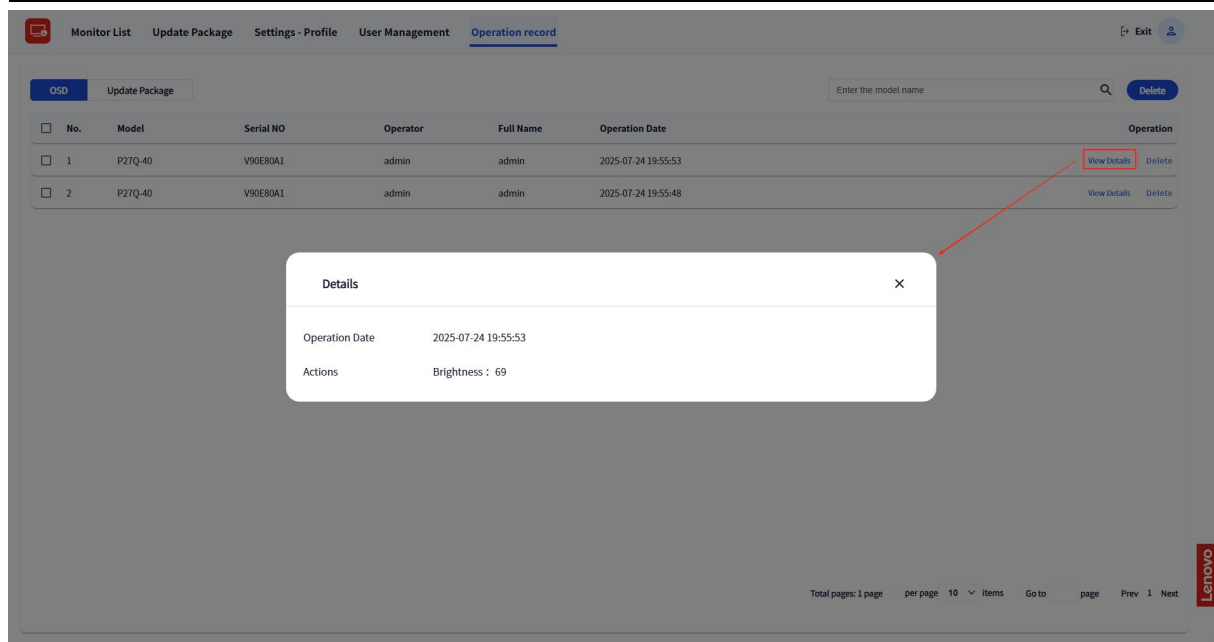

4. To delete a record, select it and click the "Delete" button.

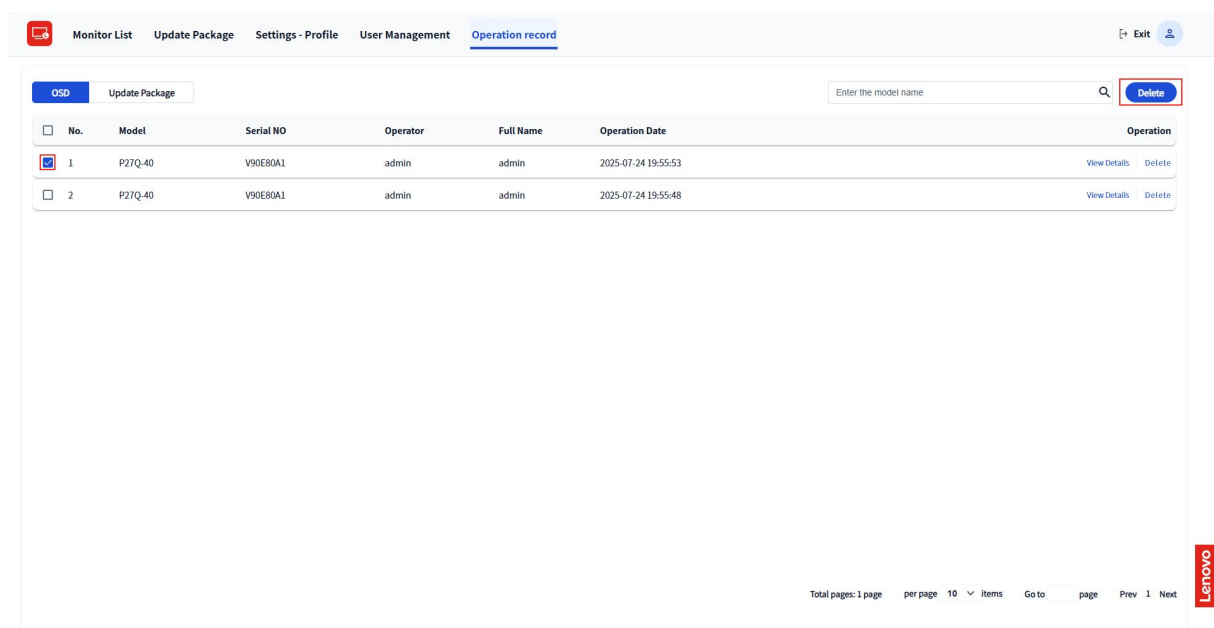

9. Personal center

9.1. Change password

1. Click the avatar icon.
2. Enter the original password, the new password, and confirm the new password.
3. Then, click the "Change Password" button.

